 


! Attention: Please read the operating manual prior to operating the machine for the first time.

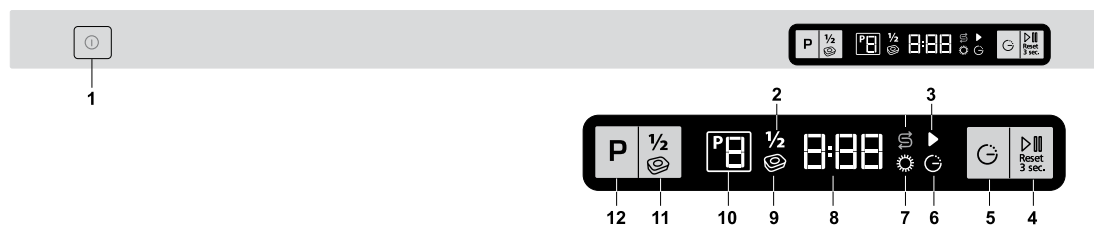

- 1 On/Off button
- 2 Half Load indicator
- 3 Start/Cancel indicator
- 4 Start/Cancel button
- 5 Time Delay button
- 6 Time Delay indicator
- 7 Rinse aid level indicator light
- 8 Remaining Time Indicator/Delay Time Indicator
- 9 Combi Tablet indicator
- 10 Programme indicator
- 11 Half Load/Combi Tablet button
- 12 Programme selection button

Starting your machine

 
- Open the tap.
- Plug in to the socket.
- Open the door of the dishwasher.
- Place the dishes in accordance with the instructions in the user manual.
- Make sure that the upper and lower impellers rotate freely.
- Put sufficient amount of detergent in the detergent dispenser and close its lid.
- Make sure that indicators on programme display are illuminated by pressing On / Off key.
- Check if the Rinse Aid indicator light and add rinse aid if needed.
- You may use Half Load / Tablet Detergent Key and Time Delay key features as necessary.
- Refer to "Table of Programme Data and Average Consumption Values" to select a suitable programme.
- Select the desired programme with Programme Selection key.
- Press Start / Pause / Cancel key to start the programme.

⚠ Pay attention not to open the door of the machine when it is running. If you need to open the door, safety system will stop

- your machine. There may be a rush of vapour when you open the door of your machine; be careful. The programme will resume running when you close the door.
- When the programme you have selected comes to an end, an audible warning signal with intervals of 8 seconds will warn you to turn off your machine. This audible signal will warn you 10 times before it turns off.
- Open the door of the dishwasher.
- Press On / Off key to turn off your machine.
- Indicator lights on the programme display will turn off.
- Close the tap.
- Unplug the machine from the socket.

⚠ Leave your dishes in the machine for about 15 minutes after they are washed in order to have them cooled down. Your dishes will dry in a shorter time if you leave the door of your machine ajar during this period. This will increase the drying effectiveness of your machine.

Programme Table

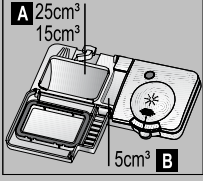 
Programme number	1	2	3 Reference*	4	5	6	7	8
Programme name	Pre-wash	Mini 30	Eco	Quick	Intensive	Hygiene	Mix	AUTO
Cleaning temperature	-	35°C	45°C	60°C	70°C	70°C	70°C	40°C - 65°C
Degree of Soiling	 <p>Suitable for removing the remnants on the soiled dishes that will be kept waiting in the machine for a few days, and thus, for preventing the bad odor buildup.</p>	Suitable for lightly soiled daily dishes that are scraped or pre-cleaned.	Most economical washing program for the normally soiled daily dishes that are kept waiting.	Daily washing program at which heavily soiled dishes are cleaned in the fastest way.	Suitable for heavily soiled dishes, pots and pans.	Suitable for the dishes which require extra hygiene such as articles for babies. Also suitable for heavily soiled dishes.	It is the most suitable washing programme for daily mixed dishes including plastic items. While delicate glass items are washed in the upper basket, pans and trays can be washed in the lower basket.	Determines the soiling degree of the dishes and sets the temperature and amount of the washing water as well as the washing time automatically. Suitable for all types of dishes.
Detergents A=25 cm³/15 cm³ B=5 cm³	-	A	A+B	A+B	A+B	A+B	A+B	A
Programme sequence (without options)	Pre-wash ▼ End	Wash ▼ Cold rinse ▼ Hot Rinse ▼ End	Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End	Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End	Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End	Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Hot Rinse ▼ Dry ▼ End	Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Hot Rinse ▼ Dry ▼ End	The programme sequence is adjusted to the amount of soiling
Duration (min)	15	30	151	58	143	124	177	80-154
Water (l)	4	10,4	11,2	10,2	16,2	17,8	18,6	10,4-14,2
Energy (kWh)	-	0,8	0,84	1,32	1,26	1,97	1,36	0,90-1,42

The consumption values shown in the table were determined under standard conditions. Differences may therefore occur under practical conditions.

* Reference programme for testing institutes according to AS/NZS 2007

On / Off Button

When you press On / Off button, indicator lights illuminate on the display for ON position. The lights turn off in OFF position.

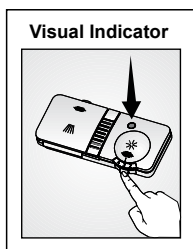

Rinse aid level indicator light

If this indicator light comes on, you have to refill rinse aid (if applicable).

You can also tell whether rinse aid must be refilled by looking at the rinse aid dispenser. When the visual fill indicator is dark, there is enough rinse aid in the dispenser.

When the colour is light, open the dispenser and refill rinse aid.

Programme Selection Button

Refer to "Table of Programme Data and Average Consumption Values" to select a programme suitable for your dishes. Select the desired programme with programme selection button.

Half Load / Tablet Detergent Button

Half Load / Tablet Detergent Button allows you to turn on and off the Half Load and Tablet Detergent functions of your machine.

Half Load Function

If you want to run your machine without loading it completely, place your dishes into the machine as you desire. Press On / Off button to turn on your machine. Press the Half Load / Tablet Detergent button after selecting the desired programme until Half Load Indicator lights up, then press Start / Pause / Cancel button and close the door of your machine. With the Half Load option you can use every part of your lower and upper baskets and you can save from both water and power.

Tablet Detergent Function

Depending on the hardness level of the tap water, the Tablet Detergent function allows obtaining a better drying performance from the multi-purpose detergents such as 2in1, 3in1, 4in1, 5in1, etc., called as all-in-one detergents. Tablet Detergent Indicator lights when the Tablet Detergent function is selected. Rinse Aid indicators turn off when this function is activated.

Turn on your machine by pressing the On / Off button to use the Tablet Detergent function. Press the Half Load / Tablet Detergent button after selecting the desired programme until Half Load Indicator lights up, then press Start / Pause / Cancel button and close the door of your machine.

To use the Half Load and Tablet Detergent functions concurrently, turn on your machine by pressing the On / Off button and then press the Half Load / Tablet Detergent button until Half Load and Tablet Detergent Indicators illuminate together.

⚠ If you have used the Half Load or Tablet Detergent features during the last programme you used, Half Load or the Tablet Detergent function will remain active in the next washing programme you will select. If you do not want to use these functions in the new programme you have selected, press the Half Load / Tablet Detergent button until the indicator of the relevant function turns off.

Changing Warning Sound Volume

Press and hold Half Load / Tablet Detergent key for 5 seconds until S:03 appears on the display. Every time you press the Half Load / Tablet Detergent key, the warning sound level will change as - - Off, S:01 Low, S:02 Medium, and S:03 High. Wait for the machine to exit automatically from the adjustment menu. Factory setting of your machine is S:03.

Time Delay

Using the Time Delay button, you may delay the starting time of your programme up to 9.5 hours with increments of 30 minutes. Press Start / Pause / Cancel button after setting the Time Delay and close the door of your machine. Once the time delay is over, the selected programme will start automatically.

Start / Pause / Cancel Button

When you press the Start / Pause / Cancel button, the washing programme you have selected will start. (Start / Pause / Cancel indicator lights in Start mode, and turns off in Pause mode)

⚠ To press the Start / Pause / Cancel button, wait for two seconds after you turn on the machine by pressing the On / Off button.

Canceling a programme

To cancel the program selection while the machine is operating open the door.
! Care must be taken when opening the door, as steam will escape. Press and hold Start / Pause / Cancel button for 3 seconds. Release the button as the Start / Pause / Cancel indicator starts flashing. Once you close the door of your machine, draining is completed in 2 minutes and the machine gives an audible warning when it is completed.

⚠ There might be residues of detergent or rinse aid left in the machine and / or on the pieces being washed depending on the step the programme you have cancelled was in.